

PART NUMBER		DESCRIPTION	
080-20288-01		TRANSFORMER RECTIFIE	
080-20325-01		TRANSFORMER RECTIFIE	
0851CM-2		PITOT TUBE	
0851FJ-1		PITOT TUBE	
0856AE12		PITOT-STATIC TUBE	
0856AE13		PITOT-STATIC TUBE	
0856AE14		PITOT-STATIC TUBE	
0856AE15		PITOT-STATIC TUBE	
0856AE16		PITOT-STATIC TUBE	
0856AE17		PITOT-STATIC TUBE	
0856AE18		PITOT-STATIC TUBE	
0856AE19		PITOT-STATIC TUBE	
0856CC11		PITOT-STATIC TUBE	
0856CC12		PITOT-STATIC TUBE	
0856CC9		PITOT-STATIC TUBE	
0856KB10		PITOT-STATIC TUBE	
0856KB7		PITOT-STATIC TUBE	
0856KB8		PITOT-STATIC TUBE	
0856KB9		PITOT-STATIC TUBE	
0856LU1		PITOT-STATIC TUBE	
0856LU2		PITOT-STATIC TUBE	
0856LU3		PITOT-STATIC TUBE	
0856LU4		PITOT-STATIC TUBE	
0856LU5		PITOT-STATIC TUBE	
0856LU6		PITOT-STATIC TUBE	
0856RE5		PITOT-STATIC TUBE	
0856RE6		PITOT-STATIC TUBE	
0856WB1		PITOT-STATIC TUBE	

0856WB2		PITOT-STATIC TUBE	
0871BN3-3		ICE DETECTOR	
1-7054-1		SHUTOFF SWITCH	
10-0067-7		EXIT LIGHT	
10-0067-9		EXIT LIGHT	
10-0119-1		EMERGENCY EXIT LIGHT	
10-60927-3		PRESSURE SWITCH	
10-61833-3		WINDOW HEAT CONTROL	
1027T100-11		STAIRWAY ACTUATOR	
1027T100-13		STAIRWAY ACTUATOR	
1027T100-15		STAIRWAY ACTUATOR	
1027T100-17		STAIRWAY ACTUATOR	
1027T100-19		STAIRWAY ACTUATOR	
102LA2AG		TEMPERATURE SENSOR	
1040T100-5		ACTUATOR	
1051T100-13		ACTUATOR	
106788A103		ACTUATOR	
106788A128		ACTUATOR	
106788A131		ACTUATOR	
107C800-21		MICROPHONE ASSY	
107C800-22		MICROPHONE ASSY	
107C800-23		MICROPHONE ASSY	
107C800-24		MICROPHONE ASSY	
107C800-25		MICROPHONE ASSY	
107C800-26		MICROPHONE ASSY	
11-0049		BATTERY POWER SUPPL	
1225P6-1		PRESSURE SWITCH	
122664-1-1		BUTTERFLY VALVE	

129552-1-1		PNEUMATIC THERMOSTAT	
132VJ1RL13		ACTUATOR	
1560		ELECTRONIC CHIME	
175096-001		ROTARY SWITCH	
18-1958-11		FLAP POSITION	
18-1958-13		FLAP POSITION	
18-1958-16		FLAP POSITION	
18-1958-19		FLAP POSITION	
18-1958-20		FLAP POSITION	
1G309		PRESSURE SWITCH	
1G386		PRESSURE SWITCH	
1G59-2		PRESSURE SWITCH	
2-301-3		BATTERY CHARGER	
2013-1A		BATTERY POWER SUPPL	
2061-13-1		INDICATOR	
2061-14-1		INDICATOR	
2067635-0701		ALTIMETER INDICATOR	
2067635-0702		ALTIMETER INDICATOR	
2067635-0703		ALTIMETER INDICATOR	
2067635-5114		ALTIMETER INDICATOR	
2067635-5115		ALTIMETER INDICATOR	
2067635-5116		ALTIMETER INDICATOR	
231-2		WINDSHIELD TEMP.CNTR	
285N0412-1		HANDSET ASSY	
285N0412-10		HANDSET ASSY	
285N0412-2		HANDSET ASSY	
285N0412-28		HANDSET ASSY	
285N0412-29		HANDSET ASSY	

285N0412-3		HANDSET ASSY	
285N0412-30		HANDSET ASSY	
285N0412-4		HANDSET ASSY	
285N0412-8		HANDSET ASSY	
285N0412-9		HANDSET ASSY	
285T0017-102		POWER SUPPLY	
285T0017-103		POWER SUPPLY	
285T0017-104		POWER SUPPLY	
285T0017-104MODA		POWER SUPPLY	
285T0017-104MODAB		POWER SUPPLY	
285T0017-104MODB		POWER SUPPLY	
285T0017-201		POWER SUPPLY	
285T0017-201MODA		POWER SUPPLY	
285T0038-10		INTERPHONE ASSY	
285T0177-3		SENSOE ASSY	
30-1521-3		NAVIGATIONAL LIGHT	
30-1521-4		NAVIGATIONAL LIGHT	
30-1521-5		NAVIGATIONAL LIGHT	
30-1521-6		NAVIGATIONAL LIGHT	
30-1660-5		LIGHT ASSY	
30-1685-1		STROBE LIGHT	
30-1685-2		STROBE LIGHT	
30-231		SMOKE DETECTOR	
30-231-15		SMOKE DETECTORS	
30-231-17		SMOKE DETECTOR	
30-231-26		SMOKE DETECTOR	
30-231-3		SMOKE DETECTOR	
30-231-30		SMOKE DETECTOR	

30-231-31		SMOKE DETECTOR	
30-231-4		SMOKE DETECTOR	
30-231-8		SMOKE DETECTOR	
30-231A-7		SMOKE DETECTOR	
30-231R-17		SMOKE DETECTOR	
30-231R-26		SMOKE DETECTOR	
30-231R-30		SMOKE DETECTOR	
30-231R-30-1		SMOKE DETECTOR	
30-231R-7		SMOKE DETECTOR	
30-284		SMOKE DETECTOR	
30-284-2		SMOKE DETECTOR	
30-284-6		SMOKE DETECTORS	
30-284-8		SMOKE DETECTORS	
30-284R-9B		SMOKE DETECTOR	
320115-11		VALVE ASSY	
320115-12		VALVE ASSY	
320115-13		VALVE ASSY	
320115-14		VALVE ASSY	
320115-15		VALVE ASSY	
320115-16		VALVE ASSY	
320115-2		VALVE ASSY	
320115-3		VALVE ASSY	
320115-4		VALVE ASSY	
320115-5		VALVE ASSY	
320115-6		VALVE ASSY	
320115-7		VALVE ASSY	
320115-8		VALVE ASSY	
320115-9		VALVE ASSY	

393020-003		INDICATOR	
393020-012		INDICATOR	
393020-01789		INDICATOR	
393026-001		INDICATOR	
393026-01837		INDICATOR	
393026-01838		INDICATOR	
393026-01840		INDICATOR	
393026-01841		INDICATOR	
393026-01880		INDICATOR	
393080-115		INDICATOR	
393080-116		INDICATOR	
393080-117		INDICATOR	
393080-118		INDICATOR	
393080-121		INDICATOR	
398786-2		VALVE	
398786-3		VALVE	
398786-4		VALVE	
398786-5		VALVE	
4-254-02		BATTERY CHARGER	
4-254-03		BATTERY CHARGER	
4-254-04		BATTERY CHARGER	
409-0001-1		BEVERAGE MAKER	
411-0001-135		COFFEE MAKER	
411-0001-137		COFFEE MAKER	
411-0001-139		COFFEE MAKER	
411-0001-141		COFFEE MAKER	
411-0001-143		COFFEE MAKER	
411-0001-147		COFFEE MAKER	

411-1001-127		COFFEE MAKER	
411-1001-131		COFFEE MAKER	
411-1001-133		COFFEE MAKER	
411-1001-135		COFFEE MAKER	
411-1001-137		COFFEE MAKER	
411-1001-139		COFFEE MAKER	
411-1001-141		COFFEE MAKER	
411-1001-143		COFFEE MAKER	
411-1001-147		COFFEE MAKER	
416-0001-11		COFFEE MAKER	
416-0001-27		COFFEE MAKER	
416-1001-1		COFFEE MAKER	
416-1001-13		COFFEE MAKER	
416-1001-15		COFFEE MAKER	
416-1001-17		COFFEE MAKER	
416-1001-19		COFFEE MAKER	
416-1001-1P		COFFEE MAKER	
416-1001-21		COFFEE MAKER	
416-1001-23		COFFEE MAKER	
416-1001-25		COFFEE MAKER	
416-1001-29		COFFEE MAKER	
416-1001-3		COFFEE MAKER	
416-1001-35		COFFEE MAKER	
416-1001-39		COFFEE MAKER	
416-1001-41		COFFEE MAKER	
416-1001-45		COFFEE MAKER	
416-1001-47		COFFEE MAKER	
416-1001-49		COFFEE MAKER	

416-1001-5		COFFEE MAKER	
416-1001-7		COFFEE MAKER	
416-1001-9		COFFEE MAKER	
425-0001-5		COFFEE MAKER	
42D107A1		PRESSURE SWITCH	
42D109-1A		PRESSURE SWITCH	
440-0001-1		COFFEE MAKER	
440-0001-3		COFFEE MAKER	
44040		LANDING LIGHT FIRE DETECTOR	
44040-4557		LANDING LIGHT FIRE DETECTOR	
44040-5557		LANDING LIGHT FIRE DETECTOR	
44261C		LANDING LIGHT FIRE DETECTOR	
45-0057-1		LANDING LIGHT	
45-0057-3		LANDING LIGHT	
45-0057-9		LANDING LIGHT	
45D31-2		PRESSURE SWITCH	
45D32		PRESSURE SWITCH	
45D34		PRESSURE SWITCH	
45D5-1		PRESSURE SWITCH	
45D5-2		PRESSURE SWITCH	
471-0001-5		BEVERAGE MAKER	
520577		OIL TEMP INDICATOR	
540742-4-1		ROTARY ACTUATOR	
541460-3-1		ROTARY ACTUATOR	
544472-1-1		ROTARY ACTUATOR	
544472-2-2		ROTARY ACTUATOR	
544494-1-1		ROTARY ACTUATOR	
544646-1		ACTUATOR	

544646-11		ACTUATOR	
544646-7		ACTUATOR	
544646-8		ACTUATOR	
544646-9		ACTUATOR	
5678-716-80-10		NP INDICATOR	
60-0304-31		BATTERY POWER SUPPLY	
60-0304-33		BATTERY POWER SUPPLY	
60-0304-51		BATTERY POWER SUPPLY	
60-1177-5		BATTERY POWER SUPPLY	
60-1177-7		BATTERY POWER SUPPLY	
60-1177-9		BATTERY POWER SUPPLY	
60-1321-1		EXIT POWER SUPPLY	
622-1181-001		VHF TRANSCEIVER	
622-1181-002		VHF TRANSCEIVER	
622-1181-003		VHF TRANSCEIVER	
622-1181-004		VHF TRANSCEIVER	
622-1181-005		VHF TRANSCEIVER	
622-1181-006		VHF TRANSCEIVER	
622-1181-008		VHF TRANSCEIVER	
622-1181-009		VHF TRANSCEIVER	
622-1181-010		VHF TRANSCEIVER	
622-1181-011		VHF TRANSCEIVER	
622-1396-001		VHF TRANSCEIVER	
622-1396-002		VHF TRANSCEIVER	
622-1396-003		VHF TRANSCEIVER	
622-1396-010		VHF TRANSCEIVER	
622-1396-011		VHF TRANSCEIVER	
622-1396-101		VHF TRANSCEIVER	

622-1396-102		VHF TRANSCEIVER	
622-1396-103		VHF TRANSCEIVER	
622-1396-110		VHF TRANSCEIVER	
622-1396-111		VHF TRANSCEIVER	
622-1396-203		VHF TRANSCEIVER	
622-1396-205		VHF TRANSCEIVER	
622-1396-206		VHF TRANSCEIVER	
622-1396-208		VHF TRANSCEIVER	
622-1396-209		VHF TRANSCEIVER	
622-1396-210		VHF TRANSCEIVER	
622-2224-003		ATC TRANSPONDER	
622-2224-101		ATC TRANSPONDER	
622-2224-201		ATC TRANSPONDER	
622-2586-001		TRANSCEIVER	
622-2586-002		TRANSCEIVER	
622-2587-001		TRANSCEIVER	
622-2588-001		TRANSCEIVER	
622-2588-002		TRANSCEIVER	
622-2589-001		TRANSCEIVER	
622-2590-001		TRANSCEIVER	
622-2590-002		TRANSCEIVER	
622-2591-001		TRANSCEIVER	
622-2920-001		D.M.E	
622-2920-002		D.M.E	
622-2920-003		D.M.E	
622-2920-004		D.M.E	
622-2920-005		D.M.E	
622-2921-001		DME	

622-2921-002		DME	
622-2921-004		DME	
622-2921-005		DME	
622-2921-006		DME	
622-3371-001		HR TRANSCEIVER	
622-3371-002		HR TRANSCEIVER	
622-3371-004		HR TRANSCEIVER	
622-3371-005		HR TRANSCEIVER	
622-3372-001		TRASMITTER	
63999-000		MICROPHONE	
63999-001		MICROPHONE	
63999-002		MICROPHONE	
63999-003		MICROPHONE	
63999-004		MICROPHONE	
63999-005		MICROPHONE	
63999-006		MICROPHONE	
64752		BEVERAGE MAKER	
64752-001		BEVERAGE MAKER	
64752-003		BEVERAGE MAKER	
64753		COFFEE MAKER	
64753-001		COFFEE MAKER	
64753-001-003		COFFEE MAKER	
64753-003		COFFEE MAKER	
65-52803-8		WINDOW HEAT ACCESSOR	
65-52808-3		OVERHEAT UNIT ASSEMB	
65-52808-3 MOD A		OVERHEAT UNIT ASSEMB	
65-52808-3 MOD AD		OVERHEAT UNIT ASSEMB	
65-52808-3 MOD B		OVERHEAT UNIT ASSEMB	

65-52808-3 MOD BD		OVERHEAT UNIT ASSEMB	
65-52808-3 MOD CD		OVERHEAT UNIT ASSEMB	
65-52808-3 MOD D		OVERHEAT UNIT ASSEMB	
65-52808-6		OVERHEAT UNIT ASSEMB	
65-52808-6 MOD A		OVERHEAT UNIT ASSEMB	
65-52808-6 MOD AD		OVERHEAT UNIT ASSEMB	
65-52808-6 MOD B		OVERHEAT UNIT ASSEMB	
65-52808-6 MOD BD		OVERHEAT UNIT ASSEMB	
65-52808-6 MOD C		OVERHEAT UNIT ASSEMB	
65-52808-6 MOD CD		OVERHEAT UNIT ASSEMB	
65-52808-6 MOD D		OVERHEAT UNIT ASSEMB	
65-52808-7		OVERHEAT UNIT ASSEMB	
65-52808-7 MOD A		OVERHEAT UNIT ASSEMB	
65-52808-7 MOD AD		OVERHEAT UNIT ASSEMB	
65-52808-7 MOD B		OVERHEAT UNIT ASSEMB	
65-52808-7 MOD BD		OVERHEAT UNIT ASSEMB	
65-52808-7 MOD C		OVERHEAT UNIT ASSEMB	
65-52808-7 MOD CD		OVERHEAT UNIT ASSEMB	
65-52808-7 MOD D		OVERHEAT UNIT ASSEMB	
65-52809-13		FIRE DTECTOR	
65-52809-15		FIRE DTECTOR	
65-54499-12		AURAL WARNING BAX	
65-54499-15		AURAL WARNING BAX	
65-54499-17		AURAL WARNING BAX	
65-54499-21		AURAL WARNING BAX	
65-54499-23		AURAL WARNING BAX	
65-54499-25		AURAL WARNING BAX	
65-54499-26		AURAL WARNING BAX	

65-54499-27		AURAL WARNING BAX	
65-54499-28		AURAL WARNING BAX	
65-54499-29		AURAL WARNING BAX	
65-54499-32		AURAL WARNING BAX	
65-54499-34		AURAL WARNING BAX	
65-54499-36		AURAL WARNING BAX	
65-54499-38		AURAL WARNING BAX	
65-54499-40		AURAL WARNING BAX	
65-54499-41		AURAL WARNING BAX	
65-54499-42		AURAL WARNING BAX	
65C21854-2		AURAL WARNING BAX	
65C34751-10		ACTUATOR ASSEMBLY	
65C34751-11		ACTUATOR ASSEMBLY	
65C34751-2		ACTUATOR ASSEMBLY	
65C34751-3		ACTUATOR ASSEMBLY	
65C34751-4		ACTUATOR ASSEMBLY	
65C34751-5		ACTUATOR ASSEMBLY	
65C34751-6		ACTUATOR ASSEMBLY	
65C34751-7		ACTUATOR ASSEMBLY	
65C34751-8		ACTUATOR ASSEMBLY	
65C34751-9		ACTUATOR ASSEMBLY	
65C36486-10		ACTUATOR ASSEMBLY	
65C36486-11		ACTUATOR ASSEMBLY	
65C36486-12		ACTUATOR ASSEMBLY	
65C36486-13		ACTUATOR ASSEMBLY	
65C36486-3		ACTUATOR ASSEMBLY	
65C36486-5		ACTUATOR ASSEMBLY	
65C36486-9		ACTUATOR ASSEMBLY	

69-37352-11		WARNING ANNUNCIATOR	
69-37352-12		WARNING ANNUNCIATOR	
69-37352-13		WARNING ANNUNCIATOR	
69-37352-14		WARNING ANNUNCIATOR	
69-37352-16		WARNING ANNUNCIATOR	
69-37352-19		WARNING ANNUNCIATOR	
69-37352-21		WARNING ANNUNCIATOR	
69-37352-25		WARNING ANNUNCIATOR	
69-37352-26		WARNING ANNUNCIATOR	
69-37352-27		WARNING ANNUNCIATOR	
69-37352-28		WARNING ANNUNCIATOR	
69-37352-30		WARNING ANNUNCIATOR	
69-37352-32		WARNING ANNUNCIATOR	
69-37352-5		WARNING ANNUNCIATOR	
69-37352-6		WARNING ANNUNCIATOR	
692525-9		PRESSURE SWITCH	
692545-1		SHUTOFF VALVE	
692545-10		SHUTOFF VALVE	
692545-11		SHUTOFF VALVE	
692545-12		SHUTOFF VALVE	
692545-13		SHUTOFF VALVE	
692545-14		SHUTOFF VALVE	
692545-17		SHUTOFF VALVE	
692545-18		SHUTOFF VALVE	
692545-2		SHUTOFF VALVE	
692545-3		SHUTOFF VALVE	
692545-400		SHUTOFF VALVE	
692545-500		SHUTOFF VALVE	

692545-6		SHUTOFF VALVE	
692545-7		SHUTOFF VALVE	
692545-9		SHUTOFF VALVE	
692545-X		SHUTOFF VALVE	
6RW176YN3		TRANSFORMER	
702242		STROBE LIGHT	
702495		LIGHT AND POWER SUPP	
702496		LIGHT AND POWER SUPP	
707760-4		1 KVA INVERTER	
708200-3		LAMP DIMMER ASSY	
711003-2		OUTFLOW VALVE	
711003-3		OUTFLOW VALVE	
711003-5		OUTFLOW VALVE	
713716		DC ROTARY ACTUATOR	
713717		AC ACTUATOR	
718416		D.C. MOTOR	
718416-2		D.C. MOTOR	
718416-3		D.C MOTOR	
8-060-02		PROXIMITY SWITCH	
8-060-07		PROXIMITY SWITCH	
8-060-10		PROXIMITY SWITCH	
8001-06-0000		OVEN	
8001-06-0000A		OVEN	
8001-06-0000B		OVEN	
8001-16-0000		OVEN	
8001-16-0000A		OVEN	
8001-16-0000B		OVEN	
8201-11-0000		OVEN	

8201-11-0000A		OVEN	
8201-11-0000D		OVEN	
8201-12-0000		OVEN	
8201-12-0000D		OVEN	
8201-13-0000		OVEN	
8201-14-0000		OVEN	
8201-17-0000		OVEN	
8201-61-0000		OVEN	
8201-63-0000		OVEN	
8201-64-0000		OVEN	
8201-67-0000		OVEN	
851AH		PITOT TUBE	
851AK		PITOT TUBE	
87001		SPEAKER	
87001-2		SPEAKER	
87001-20		SPEAKER	
87001-3		SPEAKER	
8AW61LAL3		INDICATOR	
8AW61LAS1		INDICATOR	
8AW61LBA1		INDICATOR	
8AW61LVA218		INDICATOR	
8AW61LVD220		INDICATOR	
8AW61LVF1		INDICATOR	
8AW61LVZI		INDICATOR	
8AW61V1AA1		INDICATOR	
90G118		PRESSURE SWITCH PRESSURE SWITCH PRESSURE SWITCH	
90G118-2		PRESSURE SWITCH PRESSURE SWITCH PRESSURE SWITCH	
90G191		PRESSURE SWITCH PRESSURE SWITCH PRESSURE SWITCH	

90G236		PRESSURE SWITCH PRESSURE	
90G237		PRESSURE SWITCH PRESSURE	
93A055-60		CVR	
93A055-65		CVR	
93A055-66		CVR	
93A055-67		CVR	
93A055-95		CVR	
93A100-()		CVR	
93A100-10		CVR	
93A100-11		CVR	
93A100-30		CVR	
93A100-31		CVR	
93A100-32		CVR	
93A100-33		CVR	
93A100-80		CVR	
93A100-81		CVR	
93A100-82		CVR	
93A100-83		CVR	
93A100-84		CVR	
93A100-85		CVR	
93A150-20		CVR	
93A151-()		CVR	
93A151-00		CVR	
93A151-01		CVR	
93A151-20		CVR	
93A151-30		CVR	
93A151-40		CVR	
93A151-50		CVR	

93A152-()		CVR	
93A152-00		CVR	
93A152-01		CVR	
93A152-04		CVR	
93A152-20		CVR	
93A152-25		CVR	
93A152-30		CVR	
93A152-35		CVR	
93A152-40		CVR	
93A152-50		CVR	
93A152-60		CVR	
93A152-70		CVR	
93SSMK		CVR	
947F946-3		BUS CONTROL PANEL	
948F458-1		GCU	
948F458-2		GCU	
948F458-3		GCU	
948F458-4		GCU	
948F458-5		GCU	
94P32		GAGE PRESSURE SWITCH	
R1631		ROTARY ACTUATOR	
R5303-3		SPEED ACTUATOR	
R5303-5		SPEED ACTUATOR	
R5303-51		SPEED ACTUATOR	
RPS1-B		BATTERY POWER SUPPL	
SETL-OC420M		CABIN PRESS CNTRL	
TSG420-101		STATIC INVERTER	
TSG420-103		STATIC INVERTER	

WCS2056-1		EIGHT DIRECTION SWIT	
315A1040-7		FUEL THROOTLE BOX	
315A1040-8		FUEL THROOTLE BOX	
315A1040-9		FUEL THROOTLE BOX	
315A1040-10		FUEL THROOTLE BOX	
315A1040-11		FUEL THROOTLE BOX	
541674-4		ACTUATOR	
2022432-4		ACTUATOR	
541674-1-1		ACTUATOR	
810206-5		RAM AIR ACTUATOR	
541674-3		ACTUATOR	
R5365-3		APU DOOR ACTUATOR	
541674-5		ACTUATOR	
2022432-3		ACTUATOR	
2022432-1		ACTUATOR	
9024-15704-2		SAFETY VALVE	
2061-14-1		FLAP POSISITON IND	
880T100		ACTUATOR	
45-0083-7		LANDING LIGHT	
5145-1-60		AUDIO CONTROL PNL	
5145-1-64		AUDIO CONTROL PNL	
430M1		HORN	
VFT300B00		SKIN AIR VALVE	
30-0909-201		NAVIGATION LIGHT	
1827T100-7		LINEAR ACTUATOR	
941D335-2		CIRCUIT BRAKER	
941D335-4		CIRCUIT BRAKER	
645405-1		FAN	

2473T100-1		MOTOR	
2474T100-1		SLAT DRIVE UNIT	
5500300-7		AILERON ACTUATOR	
5500300-1		AILERON ACTUATOR	
519858-1		APU ENGINE START.	
519858-2		APU ENGINE START.	
519858-3		APU ENGINE START.	
519858-4		APU ENGINE START.	
519858-5		APU ENGINE START.	
519858-6		APU ENGINE START.	
732-16810-01		LATERAL TRIM ACT.	
606832-10		OUTFLOW VALVE	
606832-11		OUTFLOW VALVE	
606832-12		OUTFLOW VALVE	
606832-13		OUTFLOW VALVE	
606832-14		OUTFLOW VALVE	
606832-15		OUTFLOW VALVE	
606832-16		OUTFLOW VALVE	
606832-17		OUTFLOW VALVE	
606832-18		OUTFLOW VALVE	
606832-19		OUTFLOW VALVE	
606832-20		OUTFLOW VALVE	
606832-21		OUTFLOW VALVE	
181RA71R206		CARGO SYSTEM PDU	
2022538-7		DRIVE UNIT	
606707-1		FAN	
L16-107		ACTUATOR DOOR APU	
AV-31-1		ACTUATOR	

684D100-17		LINEAR ACTUATOR	
181RA71R206B		CARGO PDU	
747-5826-1-0		PDU	
MA30A1001		ACTUATOR	
90-0215-2		WINDSHIELD GEAR CASE	
727-1213-04		LED LANDING LIGHT	
L16-8		LINEAR ACTUATOR	
L16-8-1		LINEAR ACTUATOR	
L16-8-3		LINEAR ACTUATOR	
L16-8-5		LINEAR ACTUATOR	
158300-101		AUTOPILOT ACTUATOR	
1211313-010		ACTUATOR	
1324M12P10		ACTUATOR	
3214-54-10		POWER SUPPLY	
326975		CHECK VALVE	
AC2-A		SERVO MOTOR	
HTE190001-2		ACTUATOR	
2980332100100		WATER ASSY FAUCET	
2980292100100		WATER ASSY FAUCET	
65C26864-3		ACTUATOR SPOLIER	
1029D100-1		ACTUATOR ELECTRIC	
D3215303000801		PIN	
129666-1		CTRL VALVE SENSOR	
129666-2		CTRL VALVE SENSOR	
129666-3		CTRL VALVE SENSOR	
792999-10		VALVE PRESS REG	
2C7-4		FUEL BOOST PUMP	
5006003D		FUEL PUMP	

4063-16082-3		VALVE INSULATION	
1827T100-3		LINEAR ACTUATOR	
1827T100-5		LINEAR ACTUATOR	
S452T201-1		LINEAR ACTUATOR	
S452T201-2		LINEAR ACTUATOR	
S452T201-3		LINEAR ACTUATOR	